How to reset compatible TN243 / TN247 Brother toner cartridges

This process should work on the following printer models.

DCP-L3510CDW DCP-L3517CDW DCP-L3550CDW HL-L3210CW HL-L3230CDW HL-L3270CDW MFC-L3710CW MFC-L3730CDN MFC-L3750CDW MFC-L3770CDW

Toner counter reset method


Sometimes following the installation of a new compatible toner cartridge for the above printers the screen will display 'Cartridge Error' or continue to show 'Replace Toner' as the counter has failed to reset.

Unfortunately this can occur with original cartridges too so the below method is a handy bit of information to know.

Step 1: With the new cartridge installed make sure the front cover is open and the printer is turned on.

HIL-I	32300	20W
Cover	is Dr	en
	C. CARS	No. of Concession, Name
		WIFI
0	+	(A)
Back	_	OK
40	-	÷.,
	Secure	
	a	
X Cancel		Go Go

Step 2: This bit might take a few attempts so please be patient. Press both the 'Back' and 'Cancel' buttons (button images right) for a couple of seconds at the same time. Then release the buttons and immediately press the 'Back' button again.

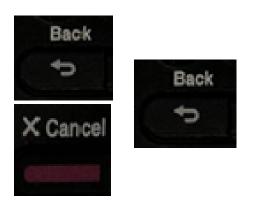

Once you have mastered the button press above the display will change when pressed correctly. You will see a code on the screen which will be similar to 'M TNR-HC' or K TNR-STD'

HL-L	3230	
M. THR	-HC	
and the second in	-	A CONTRACT
		WIFI
(0) (-	
Back		ок
(-	*	
	Secure	
	9	
× Cancel		Go Go
0		

K = Black

C = Cyan

M = Magenta

Y =Yellow

Step 3: Press $\blacktriangle/ \blacksquare$ to select the relevant code for the cartridge you wish to reset "M.TNR-HC", the first letter denotes the colour

and the 'HC' or 'STD' identify the cartridge capacity. Then press 'OK'

Cartridge code	Cartridge Colour / Capacity
TN247BK	K.TNR-HC
TN247C	C.TNR-HC
TN247M	M.TNR-HC
TN247Y	Y.TNR-HC
TN243BK	K.TNR-STD
TN243C	C.TNR-STD
TN243M	M.TNR-STD
TN243Y	Y.TNR-STD

Step 4: Finally, press 'Yes' to confirm the rest and the screen will display 'Accepted' You can now close the printer door and your cartridge will be reset and your printer ready to use.

If you are replacing more than one cartridge just repeat the process for each cartridge that needs resetting.

TonerCounterReset		
	10	
	Reset?	
Yes	No	
TonerCounterReset		
Ad	ccepted	

Good Video Showing Reset for New & Compatible

How to reset the Toner Cartridge Counter on the Brother HL-L3270CDW Printer

https://www.youtube.com/watch?v=DfCBkkDuCxE